


DT DIGITAL THERMOMETER INSTRUCTIONS

WARNING

If the temperature of the electronics in the display housing exceeds 122°F (50°C), permanent damage to the display will occur. A remote mount is recommended for high temperature applications.

BATTERY REPLACEMENT INSTRUCTIONS

1. Unscrew the bezel of the head.
2. Using a small screw driver, unscrew the two screws on the face of the dial.
3. Carefully lift the green cover to reveal two brass stand-offs. Remove the two stand-offs using a crescent wrench to get them started.
4. Lift the circuit board and display carefully out of the head. Unplug the battery pack with plastic jacket and white clip and replace it with a new battery pack. Do not attempt to disassemble the battery pack. Be sure the white connector is securely plugged in to the back of the circuit board and the battery is clipped back into the metal holder before reassembling.
5. Replace the circuit board, brass stand-offs, green face plate, screws and front bezel.

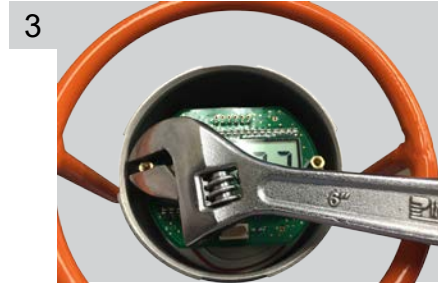

M12 WIRING DIAGRAM

