




# Z-Temp Display Instructions

# REOTEMP




TCXI-0722

## TCX-LPI Loop powered LED display – programming manual

The programming of the LED display is performed using 3 buttons located just under the display:

- functions
-  Entering Programming mode menu, parameter selection, set val
  -  Move to next menu item, increase value
  -  Move to previous menu item, decrease value


### Entering Programming mode

Press the  button for more than 3 seconds and release it. The first menu item appears on the display. Press and release the  button to go to the next menu item. Press and release the  button to go to the previous menu item.






### MENU

<b>dP</b>	Number of decimal points	0, 1 or 2
<b>ZErO</b>	Low temperature limit	in engineering units
<b>SPAn</b>	High temperature limit	in engineering units
<b>Sr</b>	Sampling rate	1 to 10 seconds
<b>Unit</b>	Engineering units	°C or °F
<b>SAVE</b>	Save changes and quit menu	
<b>Quit</b>	Discard changes and quit menu	

### Select parameter

Then the desired parameter is selected press and release the  button. The current value will show on the display. For **ZerO** and **SPAn** you can see two dots (acting as cursor). The digit between these dots will be increased or decreased by pressing buttons as described below.

### Change parameter value

Use  or  buttons to increase or decrease the value of the digit located between 2 dots (cursor). To move the cursor left long press (3 seconds) and release the  button. To move it right long press (3 seconds) and release the  button. Press and release the  button to end editing.

## Quit programming menu

 
In order to save new parameters value select **SAVE** from the menu, press and release the **E** button.

The sensor will return to Measurement mode. If the value are NOT to be save select **Quit** from the menu.

### IMPORTANT:

The sensor is continuing the measurements while in Programming mode

## MENU ITEM SELECTION

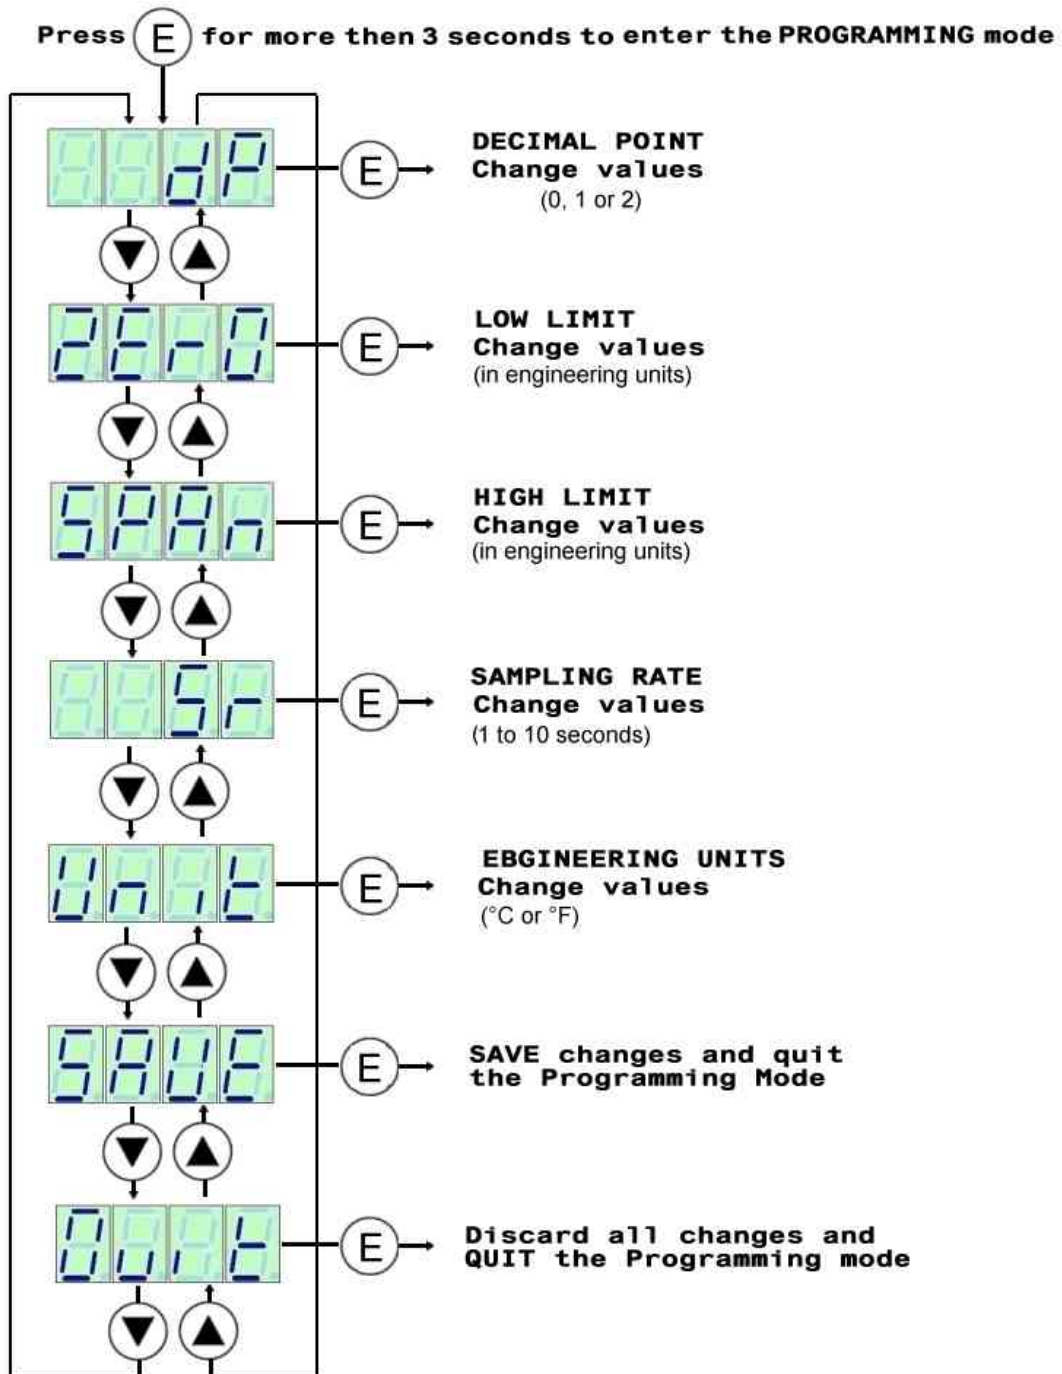

# CHANGING VALUES

