519-0223

REOTEMP INSTRUCTIONS

Z-TEMP LOOP POWERED LED DISPLAY PROGRAMMING MANUAL

Program the LED display by using the 3 buttons located just under the display:

Entering Programming mode menu, selecting parameters and



Move to next menu item, increase value

Move to previous menu item, decrease value

Entering Programming Mode

setting values

Press and hold the (E) button for more than 3 seconds and release it. The first menu item appears on the display. Press and release the (a) button to go to the next menu item. Press and release the (b) button to go to the previous menu item.

The sensor will continue to take measurements while in programming mode.

Press and hold (E) for more than 3 seconds to enter programming mode

Menu Item Selection

dP - Change # of digits after decimal point (0, 1 or 2) ZErO - Change low temperature (E) limit values (in engineering units) SPAn - Change high temperature (E limit values (in engineering units) Sr - Change sampling rate (1-10 (E) seconds) Unit - Change engineering units E (°C or °F) SAVE - Save changes and exit E) programming mode Ouit - Discard changes and exit E) programming mode

Select Parameter

When the desired parameter is selected press and release the (E) button. The current value will show on the display. For ZerO and SPAn you can see two dots (acting as cursor). The digit between these dots will be increased or decreased by pressing buttons as described below.

Change Parameter Value

Use \bigstar or V buttons to increase or decrease the value of the digit located between 2 dots (cursor). To move the cursor left, press and hold the \bigstar button for 3 seconds. To move it right, press and hold the V button for 3 seconds. Press and release the (E) button to end editing.

Quit Programming Menu

To save modified parameters, select save from the menu using the E button. To exit without saving changes, select quit.

Changing Values



